

Almen Strips

Three Thicknesses to Choose


N – A - C

Almen Strips

- Relationship of arc height response according to thickness of the strip
- N strip is .031”
- A strip is .051”
- C strip is .094”

Almen Strips

- The “A” strip is the most commonly used strip.
- For higher intensity peening use the “C” strip. It is thicker and does not bend as readily as the “A” strip.
- For lower intensity peening use the “N” strip. It is thinner and bends easier than the “A” strip.

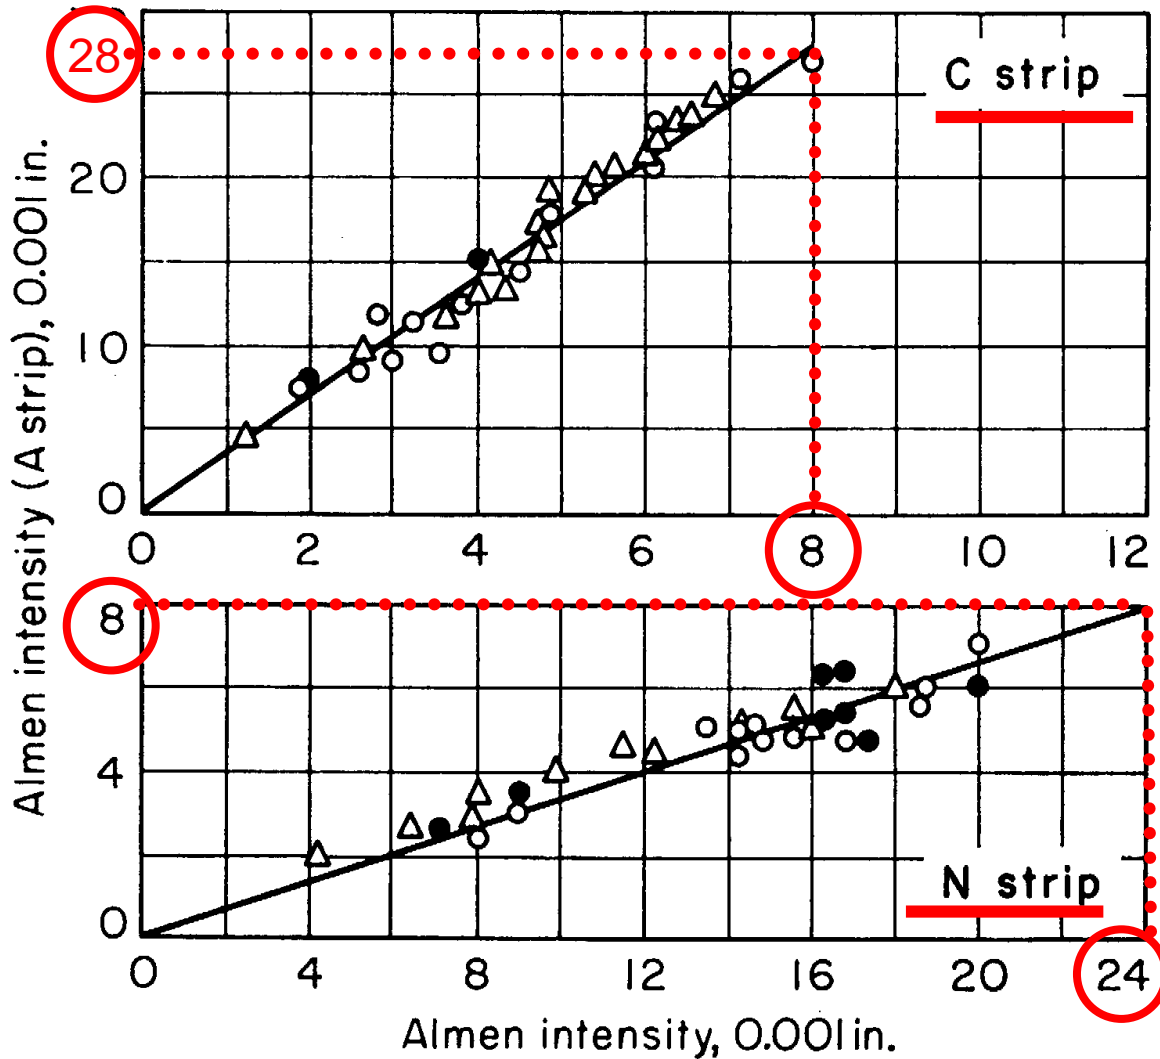

"C" strip for very high intensity

$$.028A = .008C$$

"N" strip for very low intensity

$$.024N = .008A$$

Intensity Range

- For peening intensity above .024" A use the "C" strip.
- For peening intensity below .004" A use the "N" strip.

For more information

- Visit our web site www.shotpeener.com